

The Izze-Racing Inertial Measurement Unit (IMU) measures acceleration and angular rate for all three orthogonal axes and outputs data at 200Hz via CAN.



## SENSOR SPECIFICATIONS

Acceleration Measurement Range	$\pm 2 / \pm 4 / \pm 8$ (default) / $\pm 16$ g
Angular Rate Measurement Range	$\pm 245$ (default) / $\pm 500 / \pm 2000$ dps
Acceleration Accuracy	< 1% FS
Acceleration, Thermal Drift	< 0.7 mG/°C
Angular Rate, Accuracy	< 1.5% FS
Angular Rate, Thermal Drift	< 0.05 deg/°C-s
Temperature, Resolution	1.0 °C
Temperature, Accuracy (typ)	$\pm 2.0$ °C
Package Temperature Range	-20 °C to 85 °C
Sampling Frequency & Bandwidth	10 / 50 / 120 / 240 (default) / 480 Hz

## ELECTRICAL SPECIFICATIONS

Supply Voltage, $V_s$	5 to 8 V
Supply Current, $I_s$ (typ)	25 mA
Features	<ul style="list-style-type: none"> <li>Reverse polarity protection</li> <li>Over-temperature protection (125 °C)</li> </ul>

## MECHANICAL SPECIFICATIONS

Weight	10 g
L x W x H (max)	29 x 29 x 6.5 mm
Protection Rating	IP67

## CAN SPECIFICATIONS

Standard	CAN 2.0A (11-bit identifier), ISO-11898
Bit Rate	1 Mbit/s (default)
Byte Order	Big-Endian / Motorola
Data Conversion	0.1dps per bit, 0.01g per bit, 1 °C per bit, signed
CAN ID's (Default)	Angular Rate: 1260 (Dec) / 0x4EC (Hex) Acceleration: 1261 (Dec) / 0x4ED (Hex)
Termination	None

### CAN ID: 0x4EC

Angular Rate, X-Axis		Angular Rate, Y-Axis		Angular Rate, Z-Axis		Unused	
Byte 0 (MSB)	Byte 1 (LSB)	Byte 2 (MSB)	Byte 3 (LSB)	Byte 4 (MSB)	Byte 5 (LSB)	Byte 6 (MSB)	Byte 7 (LSB)

### CAN ID: 0x4ED

Acceleration, X-Axis		Acceleration, Y-Axis		Acceleration, Z-Axis		Temperature	
Byte 0 (MSB)	Byte 1 (LSB)	Byte 2 (MSB)	Byte 3 (LSB)	Byte 4 (MSB)	Byte 5 (LSB)	Byte 6 (MSB)	Byte 7 (LSB)

\* The default CAN ID (0x4EC) is adjustable

## WIRING SPECIFICATIONS:

Wire	26 AWG M22759/32, DR25 jacket
Cable Length (typ.)	500 mm
Connector	None

Supply Voltage, V <sub>s</sub>	Red	(twisted)
Ground	Black	
CAN +	Blue	(twisted)
CAN -	White	

## BASE CAN ID PROGRAMMING – RECEIVER:

To modify the IMU's base CAN ID, gyro scale, accelerometer scale, sampling frequency, or bit rate, send the following CAN message at 1Hz for at least 10 seconds and then reset the IMU by disconnecting power for 5 seconds.


CAN ID = Base ID (Default = 0x4EC)

Programming Constant		New CAN Base ID (11-bit)		Gyro Scale	Accel Scale	Frequency	Bit Rate
Byte 0 (MSB)	Byte 1 (LSB)	Byte 2 (MSB)	Byte 3 (LSB)	Byte 4	Byte 5	Byte 6	Byte 7
30000 = 0x7530		1 = 0x001		1 = +/- 245dps	1 = +/- 2G	1 = 10Hz	1 = 1 Mbit/s
		⋮		2 = +/- 500dps	2 = +/- 4G	2 = 50Hz	2 = 500 kbit/s
		2047 = 0x7FF		3 = +/- 2000dps	3 = +/- 8G	3 = 120Hz	3 = 250 kbit/s
					4 = +/- 16G	4 = 240Hz	4 = 100 kbit/s
						5 = 480Hz	

CAN messages should only be sent to the IMU during the configuration sequence.

**DO NOT continuously send CAN messages to the IMU.**

**DIMENSIONS:**

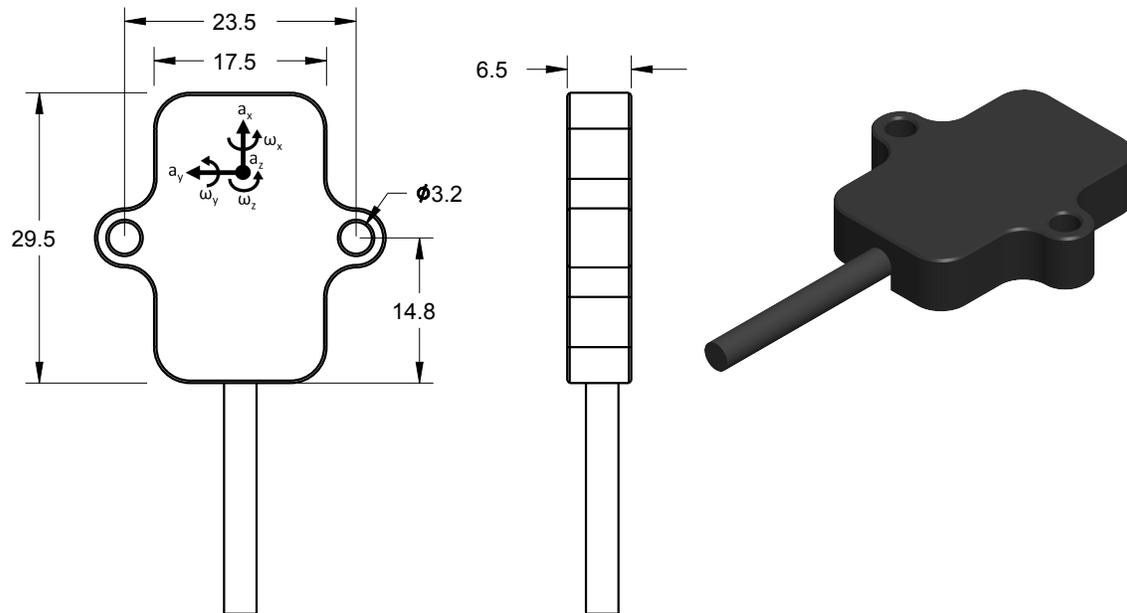

**ADDITIONAL INFORMATION:**

- Mount the IMU with Velcro or rubber bushings to attenuate chassis/engine vibrations
- Avoid installing the IMU near hot objects or area's subjected to thermal transients

**WARRANTY:**

All sensors come with a 30-day return policy and have a 1-year warranty from manufacturing defects. If there is ever an issue, please contact us.